
CN1	P1(J1)	WIRE	
1	2	Brown	
2	1	Black	
3	4	Orange	
4	3	Red	
5	6	Green	
6	5	Yellow	

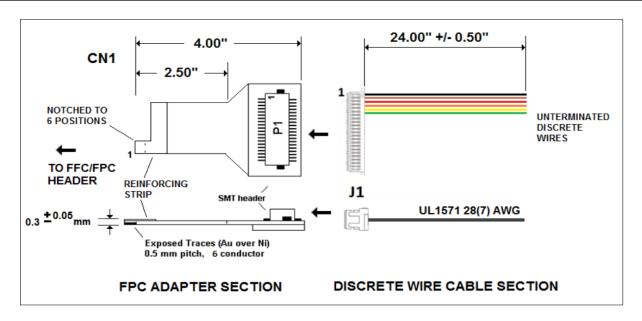

ASSEMBLY INSTRUCTIONS:

- 1) NOTCH DOWN QD5747
- 2) CUT DOWN UNUSED WIRES AT J1 CONNECTOR ON FLYING LEAD



CONVERTS FROM 0.50MM PITCH FFC/FPC INTERFACE TO DISCRETE WIRE

SEE NEXT PAGE FOR PICTURES AND ADDITIONAL INFORMATION

DWG BY: PT	DATE: 9/2/1	5	DRAWINGS ARE NOT TO SCALE. ALL DIMENSIONS ARE			
CHK BY:	DATE:		INCHES UNLESS OTHERWISE SPECIFIED. ALI TOLERANCES ARE +/- 0.50" UNLESS OTHERWIS			
APPR: -	DATE: -		SPECIFIED			
REVISION HISTORY						
REV				DATE	APPROVED	
	INITIAL RELEASE		6/27/06	GLR		
	DRAWING UPDATE, LENGTH INCREASE			9/2/15	PT	
	ASSEMBLY INSTRUCTIONS UPDATE			11/16/21	PT	



RoHS

Quadrangle Products Inc.

Quadrangle Products Inc. 28 Harrison Ave Suite 105, Englishtown, NJ 07726 Tel: 732-792-1234 Fax: 732-792-8305

© Copyright 2006 Quadrangle Products Inc.
This document is confidential and proprietary to Quadrangle Products
Inc. and shall not be reproduced, copied, used, or issued as the basis of
manufacturing and/or sale of equipment, material, or any other item.
Quadrangle Products Inc. has the sole and exclusive ownership rights
to this document and information contained herein.

RT-700G-06-DIS CABLE KIT

FPC Adapter Part Number:

QD5747AD (33 Conductor Base) (2-33 Conductors When Customized)

FPC Adapter Part Number:

QD5745AD (50 Conductor Base) (2-50 Conductors When Customized)



** Example shown using QD5747AD **



Discrete Wire Flying Lead Part Number (40C): QD6021 (Used with QD5747AD) Discrete Wire Flying Lead Part Number (50C): QD6023 (Used with QD5745AD)