
CN1	P1(J1)	WIRE COLOR			
1	2	Brown			
2	1	Black			
3	4	Orange			
4	3	Red			
5	6	Green			
6	5	Yellow			
7	8	Violet			
8	7	Blue			
9	10	White			
10	9	Gray			
11	12	Brown			
12	11	Black			
13	14	Orange			
14	13	Red			

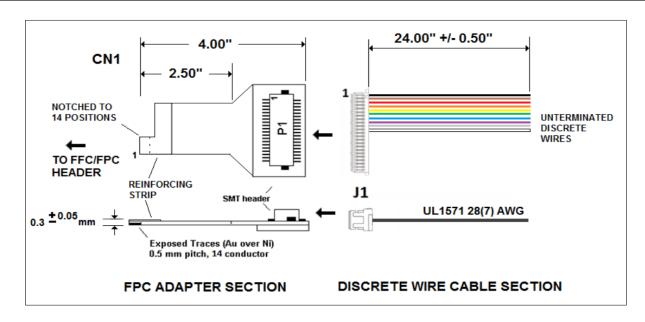

ASSEMBLY INSTRUCTIONS:

- 1) NOTCH DOWN QD5747
- 2) CUT DOWN UNUSED WIRES AT J1 CONNECTOR ON FLYING LEAD

CONVERTS FROM 0.50MM PITCH FFC/FPC INTERFACE TO DISCRETE WIRE

SEE NEXT PAGE FOR PICTURES AND ADDITIONAL INFORMATION

0.5mm +/- 0.07mm	FPC TRACE DETA 0.5mm +/- 0.03mm	1L 2:802
3mm Exposed Traces		

DWG BY:	PT	DATE: 9/2/15	DRAWINGS ARE NOT TO SCA				
CHK BY:		DATE:	INCHES UNLESS OTHERWISE SPECIFIED. ALL TOLERANCES ARE +/- 0.50" UNLESS OTHERWISE SPECIFIED				
APPR: -		DATE: -					
REVISION HISTORY							
REV				DATE	APPROVED		
	INITIAL RELEASE			6/27/06	GLR		
	DRAWING UPDATE, LENGTH INCREASE			9/2/15	PT		
	ASSEMBLY INSTRUCTIONS UPDATE			11/16/21	PT		
		•					



RoHS

Quadrangle Products Inc.

Quadrangle Products Inc. 28 Harrison Ave Suite 105, Englishtown, NJ 07726 Tel: 732-792-1234 Fax: 732-792-8305

© Copyright 2006 Quadrangle Products Inc.
This document is confidential and proprietary to Quadrangle Products
Inc. and shall not be reproduced, copied, used, or issued as the basis of
manufacturing and/or sale of equipment, material, or any other item.
Quadrangle Products Inc. has the sole and exclusive ownership rights
to this document and information contained herein.

RT-700G-14-DIS CABLE KIT

FPC Adapter Part Number:

QD5747AD (33 Conductor Base) (2-33 Conductors When Customized)

FPC Adapter Part Number:

QD5745AD (50 Conductor Base) (2-50 Conductors When Customized)



** Example shown using QD5747AD **



Discrete Wire Flying Lead Part Number (40C): QD6021 (Used with QD5747AD) Discrete Wire Flying Lead Part Number (50C): QD6023 (Used with QD5745AD)