

CN1	P1(J1)	WIRE	
1	2	Gray	
2	1	Stripe	
3	4	Gray	
4	3	Gray	
5	6	Gray	
6	5	Gray	
7	8	Gray	
8	7	Gray	
9	10	Gray	
10	9	Gray	
11	12	Gray	
12	11	Gray	
13	14	Gray	
14	13	Gray	

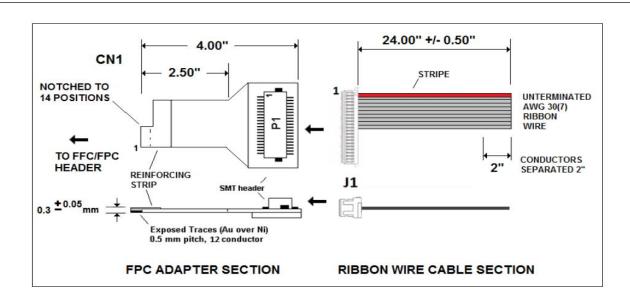

ASSEMBLY INSTRUCTIONS:

- 1) NOTCH DOWN QD5747
- 2) CUT DOWN UNUSED WIRES AT J1 CONNECTOR ON FLYING LEAD

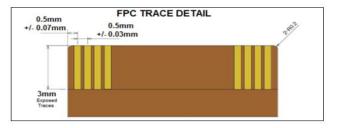



CONVERTS FROM 0.50MM PITCH FFC/FPC INTERFACE TO RIBBON WIRE

SEE NEXT PAGE FOR PICTURES AND ADDITIONAL INFORMATION

DWG BY: PT	DATE: 9/18/15	DRAWINGS ARE NOT TO SCALE. ALL DIMENSIONS ARE! INCHES UNLESS OTHERWISE SPECIFIED. ALL TOLERANCES ARE +/- 0.50" UNLESS OTHERWISE SPECIFIED		
CHK BY:	DATE:			
APPR: -	DATE: -			
	REVISION HIST	ORY		
REV			DATE	APPROVED
	INITIAL RELEASE		6/27/06	GLR
	DRAWING UPDATE, LENGTH INCREASE		9/18/15	PT
	Assembly Instructions Update		12/1/21	PT
	_			



Quadrangle Products Inc.

Quadrangle Products Inc. 28 Harrison Ave Suite 105, Englishtown, NJ 07726 Tel: 732-792-1234 Fax: 732-792-8305

© Copyright 2006 Quadrangle Products Inc.

This document is confidential and proprietary to Quadrangle Products Inc. and shall not be reproduced, copied, used, or issued as the basis of manufacturing and/or sale of equipment, material, or any other item. Quadrangle Products Inc. has the sole and exclusive ownership rights to this document and information contained herein.


RT-700G-14-RIB CABLE KIT


FPC Adapter Part Number:

QD5747AD (33 Conductor Base) (2-33 Conductors When Customized)

FPC Adapter Part Number:

QD5745AD (50 Conductor Base) (2-50 Conductors When Customized)

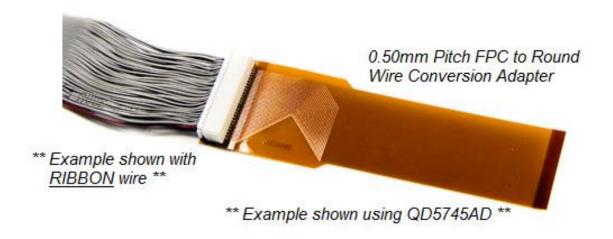

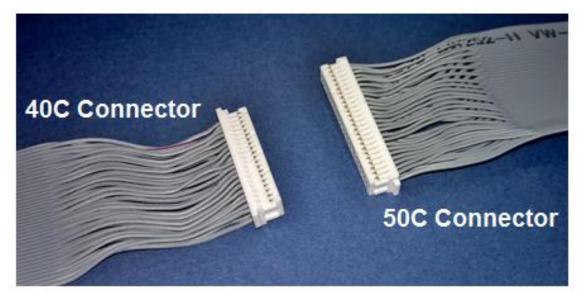

Ribbon Wire Flying Lead Part Number (40C): QD6020 (Used with QD5747AD)
Ribbon Wire Flying Lead Part Number (50C): QD6022 (Used with QD5745AD)