

CN1	P1(J1)	WIRE COLOR	
CONTRACTOR	100000000000000000000000000000000000000		
1	2	Gray	
2	1	Stripe	
3	4	Gray	
4	3	Gray	
5	6	Gray	
6	5	Gray	
7	8	Gray	
8	7	Gray	
9	10	Gray	
10	9	Gray	
11	12	Gray	
12	11	Gray	
13	14	Gray	
14	13	Gray	
15	16	Gray	
16	15	Gray	
17	18	Gray	
18	17	Gray	
19	20	Gray	
20	19	Gray	
21	22	Gray	
22	21	Gray	



#### ASSEMBLY INSTRUCTIONS:

- 1) NOTCH DOWN QD5747
- 2) CUT DOWN UNUSED WIRES AT J1 CONNECTOR ON FLYING LEAD

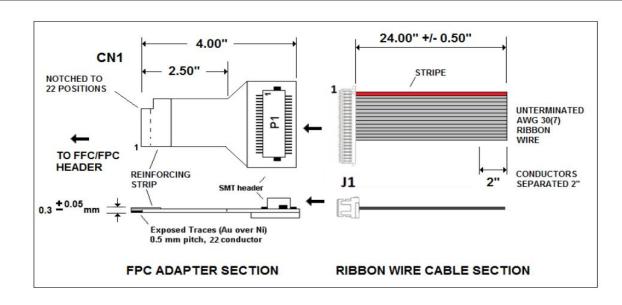

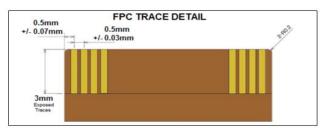

### CONVERTS FROM 0.50MM PITCH FFC/FPC INTERFACE TO RIBBON WIRE

#### SEE NEXT PAGE FOR PICTURES AND ADDITIONAL INFORMATION

DWG BY:	PT DATE: 9/18/15	DRAWINGS ARE NOT TO SCALE. ALL DIMENSIONS / INCHES UNLESS OTHERWISE SPECIFIED. ALL TOLERANCES ARE +/- 0.50° UNLESS OTHERWIS		
CHK BY:	DATE:			
APPR: -	DATE: -	SPECIFIED		
	REVISION HIST	TORY		
REV			DATE	APPROVED
	INITIAL RELEASE		6/27/06	GLR
	DRAWING UPDATE, LENGTH INCREASE		9/18/15	PT
	Assembly Instructions Update		12/1/21	PT



Quadrangle Products Inc.

Quadrangle Products Inc. 28 Harrison Ave Suite 105, Englishtown, NJ 07726 Tel: 732-792-1234 Fax: 732-792-8305

© Copyright 2006 Quadrangle Products Inc.

This document is confidential and proprietary to Quadrangle Products Inc. and shall not be reproduced, copied, used, or issued as the basis of manufacturing and/or sale of equipment, material, or any other item. Quadrangle Products Inc. has the sole and exclusive ownership rights to this document and information contained herein.


RT-700G-22-RIB CABLE KIT


## FPC Adapter Part Number:

QD5747AD (33 Conductor Base) (2-33 Conductors When Customized)

# FPC Adapter Part Number:

QD5745AD (50 Conductor Base) (2-50 Conductors When Customized)

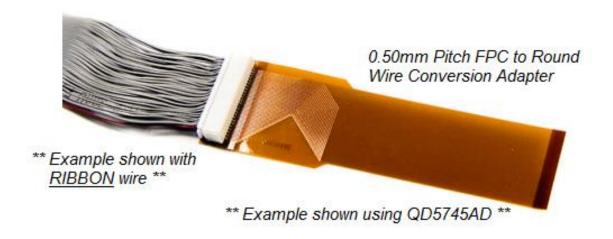

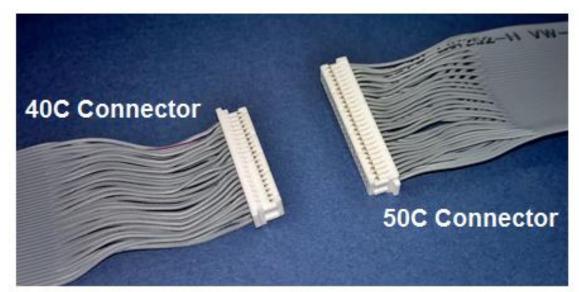

Ribbon Wire Flying Lead Part Number (40C): QD6020 (Used with QD5747AD)
Ribbon Wire Flying Lead Part Number (50C): QD6022 (Used with QD5745AD)