
CN1	P1(J1)	WIRE	
CNI	P1(11)	COLOR	
1	2	Brown	
2	1	Black	
3	4	Orange	
4	3	Red	
5	6	Green	
6	5	Yellow	
7	8	Violet	
8	7	Blue	
9	10	White	
10	9	Gray	
11	12	Brown	
12	11	Black	
13	14	Orange	
14	13	Red	
15	16	Green	
16	15	Yellow	
17	18	Violet	
18	17	Blue	
19	20	White	
20	19	Gray	
21	22	Brown	
22	21	Black	
23	24	Orange	
24	23	Red	
25	26	Green	
26	25	Yellow	
27	28	Violet	
28	27	Blue	

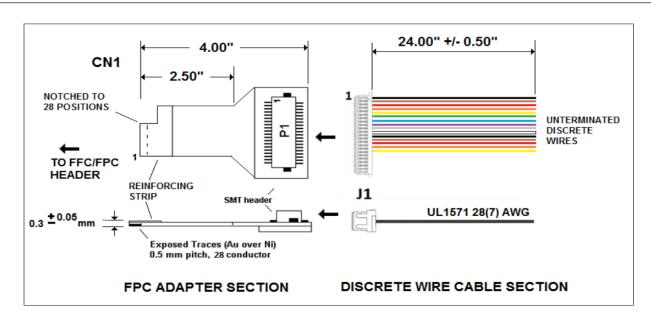


ASSEMBLY INSTRUCTIONS:

- 1) NOTCH DOWN QD5747
- 2) CUT DOWN UNUSED WIRES AT J1 CONNECTOR ON FLYING LEAD



PT

11/17/21

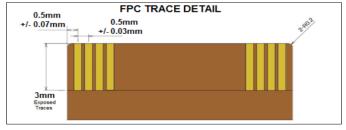

CONVERTS FROM 0.50MM PITCH FFC/FPC INTERFACE TO DISCRETE WIRE

SEE NEXT PAGE FOR PICTURES AND ADDITIONAL INFORMATION

DWG BY: PT CHK BY:		DATE: 9/2/15	DRAWINGS ARE NOT TO SCALE. ALL DIMENSIONS AR		
		DATE:	INCHES UNLESS OTHERWISE SPECIFIED. A TOLERANCES ARE +/- 0.50" UNLESS OTHER)		
APPR: -		DATE: -	SPECIFIED		
		REVISION HIST	TORY		
REV				DATE	APPROVED
	INITIAL RELEASE			6/27/06	GLR
	DRAWING UPDATE, LENGTH INCREASE			9/2/15	PT

ASSEMBLY INSTRUCTIONS UPDATE



Quadrangle Products Inc.

Quadrangle Products Inc. 28 Harrison Ave Suite 105, Englishtown, NJ 07726 Tel: 732-792-1234 Fax: 732-792-8305

© Copyright 2006 Quadrangle Products Inc.
This document is confidential and proprietary to Quadrangle Products
Inc. and shall not be reproduced, copied, used, or issued as the basis of
manufacturing and/or sale of equipment, material, or any other item.
Quadrangle Products Inc. has the sole and exclusive ownership rights
to this document and information contained herein.

RT-700G-28-DIS CABLE KIT

FPC Adapter Part Number:

QD5747AD (33 Conductor Base) (2-33 Conductors When Customized)

FPC Adapter Part Number:

QD5745AD (50 Conductor Base) (2-50 Conductors When Customized)



** Example shown using QD5747AD **



Discrete Wire Flying Lead Part Number (40C): QD6021 (Used with QD5747AD) Discrete Wire Flying Lead Part Number (50C): QD6023 (Used with QD5745AD)