
CN1	P1(J1)	WIRE	
CIVI	PI(JI)	COLOR	
1	2	Brown	
2	1	Black Orange Red Green	
3	4		
4	3		
5	6		
	5	Yellow	

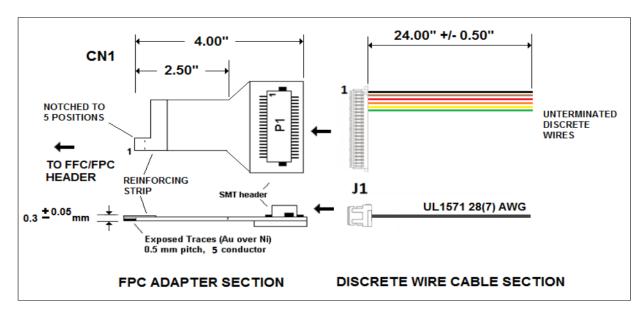


ASSEMBLY INSTRUCTIONS:

- 1) NOTCH DOWN QD5747
- 2) CUT DOWN UNUSED WIRES AT J1 CONNECTOR ON FLYING LEAD

CONVERTS FROM 0.50MM PITCH FFC/FPC INTERFACE TO DISCRETE WIRE

SEE NEXT PAGE FOR PICTURES AND ADDITIONAL INFORMATION

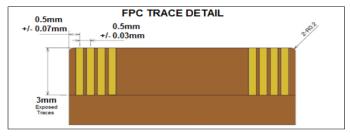

	DWG BY: PT		DATE: 9/2/15	DRAWINGS ARE NOT TO SCALE. ALL DIMENSIONS AF		
	CHK BY:		DATE:	INCHES UNLESS OTHERWISE SPECIFIED. ALL TOLERANCES ARE +/- 0.50" UNLESS OTHERWISE SPECIFIED		
	APPR: -		DATE: -			
			REVISION HISTORY			
	REV INITIAL RELEASE				DATE	APPROVED
					6/27/06	GLR
		DRAWING UPDATE, LENGTH INCREASE			9/2/15	PT
	ASSEMBLY INSTRUCTIONS UPDATE				11/17/21	PT
			•	•		



RoHS

Quadrangle Products Inc.

Quadrangle Products Inc. 28 Harrison Ave Suite 105, Englishtown, NJ 07726 Tel: 732-792-1234 Fax: 732-792-8305

© Copyright 2006 Quadrangle Products Inc.
This document is confidential and proprietary to Quadrangle Products
Inc. and shall not be reproduced, copied, used, or issued as the basis of
manufacturing and/or sale of equipment, material, or any other item.
Quadrangle Products Inc. has the sole and exclusive ownership rights
to this document and information contained herein.

RT-700G-05-DIS CABLE KIT

FPC Adapter Part Number:

QD5747AD (33 Conductor Base) (2-33 Conductors When Customized)

FPC Adapter Part Number:

QD5745AD (50 Conductor Base) (2-50 Conductors When Customized)



** Example shown using QD5747AD **



Discrete Wire Flying Lead Part Number (40C): QD6021 (Used with QD5747AD) Discrete Wire Flying Lead Part Number (50C): QD6023 (Used with QD5745AD)